


FXS142DLPIR DALI-2 D4i PIR SENSOR




FEATURES

- Designed for high level detection (up to 17m)
- Setting via DALI configuration software
- Alternatively, settings via remote
- Power supply and sensor data via DALI-2 bus
- Self-contained application controller
- Individual / group addressing

KEY ELEMENTS

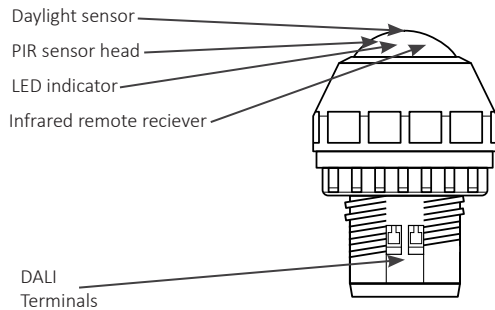

DIMENSIONS

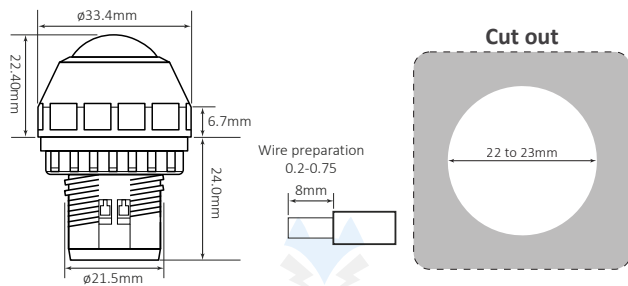

Technical Data

Operating Voltage	12-22.5V DC
Input Current	Max. 8mA
Standby Power	Max. 0.2W
Sensor Technology	PIR
Mounting Height	Max. 17m
Detection Radius	Max. 11.5m
Operating Temperature	-20°C to 50°C
IP Rating	Front Face IP65

Logistics Information

Product Dimensions	46 x 32 x 32mm
Net Weight	0.02kg
Box Dimensions	40 x 40 x 52mm
Gross Weight	0.03kg
Carton Qty	175pcs
Carton Dimensions	340 x 280 x 280mm
Carton Weight	4.80kg
Commodity Code	8536500090



Materials

Housing	Polycarbonate
Finish	Matt
Colour	White

REMOTE CONTROL



When used without a front end control system, the settings can be adjusted directly via remote control. The paired remote control for this sensor is REM-S22. See separate data sheet for further details.

WIRING

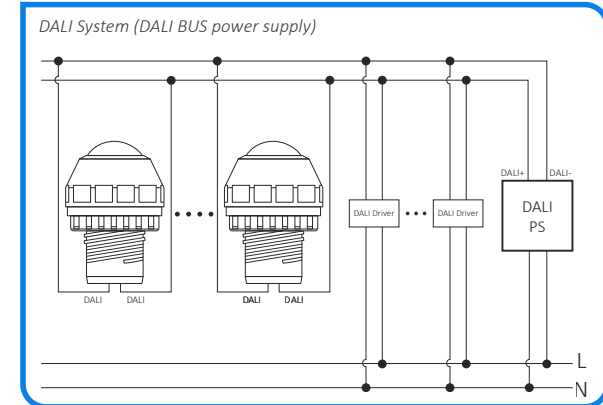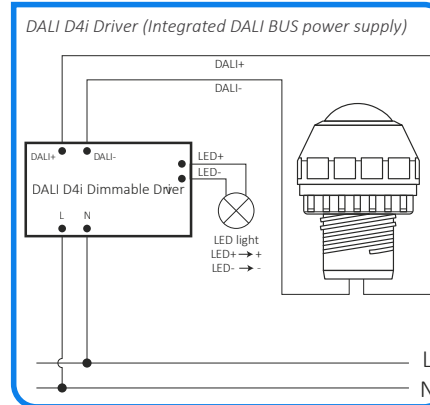


DETECTION

H(m)	R(m)
3	2.0
4	2.7
6	4.1
8	5.5
10	6.9
12	8.2
14	9.6
17	11.5

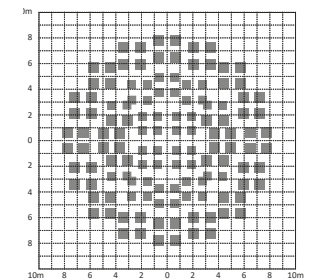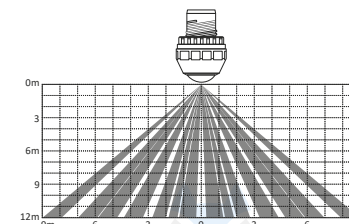

DAYLIGHT MONITORING

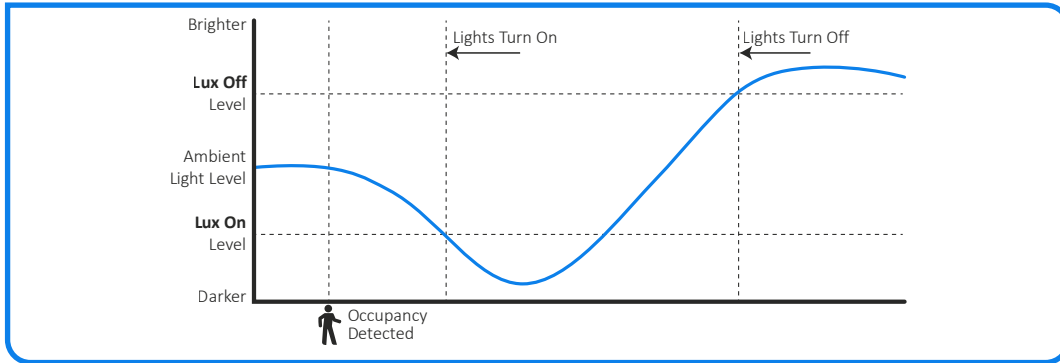

REMOTE SETTINGS

The mated remote control for this model is REM-S22.

DALI-2 & D4i standards

- EN62386-101 Ed.2
- EN62386-103 Ed.2
- EN62386-351 Type C

PARAMETERS SETTING (VIA DALI BUS)

Address	Description	Factory default value	Reset Value	Range of validity	Memory Type	
0x00	Address of last accessible memory location	0x19	no change	0x19	ROM	
0x01	Indicator byte	0x85	no change	0x85	ROM	
0x02	Memory bank 2 lock byte. Lockable bytes in the memory bank shall be read-only while the lock byte has a value different from 0x55	0xFF	0xFF		RAM	
0x03	T1 level	0xFE	0xFE(100%)	[0, 254]	NVM(lockable)	
0x04	T2 level	0xAA	0xAA(10%)	[0, 254]	NVM(lockable)	
0x05	T1 time (LSB)	0x5A	0x5A(90s)	[1, 65535(+∞)]	NVM(lockable)	
0x06	T1 time (MSB)	0x00	0x00		NVM(lockable)	
0x07	T2 time (LSB)	0x2C	0x2C(5min)	[1, 65535(+∞)]	NVM(lockable)	
0x08	T2 time (MSB)	0x01	0x01		NVM(lockable)	
0x09	Lux level (LSB)	0xFF	0xFF (disabled)	[10, 2000Lux], 65535(disabled)	NVM(lockable)	
0x0A	Lux level (MSB)	0xFF	0xFF		NVM(lockable)	
0x0B	Send data way	0x00	0x00 (default factory setting)	0x00, 0x01	0x00 (default factory setting)	NVM(lockable)
					0x01 (Recall scene command)	NVM(lockable)
0x0C	Send data address method	0x00	0x00 (broadcast)	[0, 3]	0x00 (Broadcast)	NVM(lockable)
					0x01 (Short addressing)	
					0x02 (Group addressing)	
					0x03 (Multi-groups addressing)	
					Other: 0x00(Broadcast)	
0x0D	Send data address value	0x00	0x00	Location 0x0D=1, [0, 63]; Location 0x0D=2, [0, 15]	NVM(lockable)	
0x0E	T1 Scene	0x00	0x00	[0, 15]	NVM(lockable)	
0x0F	T2 Scene	0x01	0x01	[0, 15]	NVM(lockable)	
0x10	Receive occupancy sensor type	0x9F	0x9F	x00x xxxxb	NVM(lockable)	
0x11	Receive occupancy sensor short address	0x00	0x00	[0, 63]	NVM(lockable)	
0x12	Receive occupancy sensor instance number byte0 (LSB)	0xFF	0xFF	[0, 0xFFFFFFFF]	NVM(lockable)	
0x13	Receive occupancy sensor instance number byte1	0xFF	0xFF		NVM(lockable)	
0x14	Receive occupancy sensor instance number byte2	0xFF	0xFF		NVM(lockable)	
0x15	Receive occupancy sensor instance number byte3 (MSB)	0xFF	0xFF		NVM(lockable)	
0x16	Receive occupancy sensor instance group byte0 (LSB)	0xFF	0xFF	[0, 0xFFFFFFFF]	NVM(lockable)	
0x17	Receive occupancy sensor instance group byte1	0xFF	0xFF		NVM(lockable)	
0x18	Receive occupancy sensor instance group byte2	0xFF	0xFF		NVM(lockable)	
0x19	Receive occupancy sensor instance group byte3 (MSB)	0xFF	0xFF		NVM(lockable)	

LSB: Least Significant Byte.
MSB: Most Significant Byte.
Range of values: [lowest, highest]

All numbers used in this document are decimal numbers unless otherwise noted. Hexadecimal numbers are given in the format 0xVV, where VV is the value. Binary numbers are given in the format XXXXXXXXb or in the format XXXX XXXX, where X is 0 or 1; "x" in binary numbers means "don't care"

T1 level:

This is the preset max. brightness of the fixture after motion detected. The brightness that the sensor enters into T1 by DAPC, the default factory setting is 0xFE.

T2 level:

This is the dimmed low light level you would like to have after the hold time in the absence of people. The brightness that the sensor enters into T2 by DAPC, the default factory setting is 0xFE.

T1 time:

T1 time is Hold-time that means the time period to keep the lamp on T1 level after motion detected.
T1 time=65535 (0xFFFF) [+ ∞], means bi-level dimming control, the fixture never enters into T2 level.

T2 time:

This is the time period that the lamp remains at T2 level before it is completely switched off in the long absence of people.
When T2 time=65535 (0xFFFF) [+ ∞], means bi-level dimming control, the fixture never switch off.

Lux level:

Lux level means the daylight threshold to enable or disable the sensor function.
Lux level=65535 (0xFFFF) [Disable], means the sensor always, even during daylight.

Send data way:

The sensor sends the signals of control gears, and the details are as below:

0x00: DAPC (direct arc power control)- default factory setting;

0x01: Recall Scene Command-Recall scene value is T1 scene (0x0F) and scene (0x10) in memory bank;

Other: same function as 0x00

Send data address method:

This is the method of device addressing used by the transmitter, adapts different way to send DAPC or Recall scene command based on required value.

0x03: Multi-groups addressing, can control the groups the sensor enters into, then send the multi-group control instances one time, max. 16 groups

Send data address value:

(1) Send data address method=0x02 [0, 63], default setting is 63 when data> 63;

(2) Send data address method=0x03 [0, 15], default setting is 15 when data> 15;

T1 Scene:

The sensor sends the value of scene instance [0, 15] under T1 status, default setting is 15 when data> 15;

T2 Scene:

The sensor sends the value of scene instance [0, 15] under T2 status, default setting is 15 when data> 15;

Receive occupancy sensor type:

The sensor receive the signal other sensors sent (24-bit event message frame)

(1) Bit7: event message enable

(2) Bit4: instance groups + instance types (event scheme 4)

(3) Bit3: device groups + instance types (event scheme 3)

(4) Bit2: short addresses + instance numbers (event scheme 2)

(5) Bit1: short addresses + instance types (event scheme 1)

(6) Bit0: instance types + instance numbers (event scheme 0)

(7) Other bit: reservation

Receive occupancy sensor short address:

Receive occupancy sensor type [bit2], the sensor can receive the equivalent signal of occupancy sensor short address

Range of validity [0, 63], default setting is 63 when data> 63;

Receive occupancy sensor instance number:

Bit0-Bit31: each bit corresponds to instance number, e.g. bit is 1, means that the sensor can receive the signal of the instance number(bit is 1).

For example: receive occupancy sensor instance number=0x00000003, Bit0=1 & Bit1=1, means that receives occupancy sensor signal of the sensor whose instance number is 0 and 1.

Receive occupancy sensor instance group:

Bit0-Bit31: each bit corresponds to instance group, bit is 1, means that receives occupancy sensor signal fo the instance group (bit is 1).

For example: receive occupancy sensor instance group=0x00000003, Bit0=1 & Bit1=1, means that receives occupancy sensor signal of the sensor whose instance group is 0 and 1.

For example: change the T1 level to 50%(log level: 229) via broadcasting as below

START QUIESCENT MODE(broadcast)

START QUIESCENT MODE(broadcast)

DTR1(0x02)

DTR0(0x02)

ENABLE WRITE MEMORY(broadcast)

ENABLE WRITE MEMORY(broadcast)

WRITE MEMORY LOCATION – NO REPLY(0x55)//Unlock Lock Byte

DTR0(0x03)

WRITE MEMORY LOCATION – NO REPLY(0xE5)//Set T1 level to 50%(log level: 229)

SAVE PERSISTENT VARIABLES(broadcast)

SAVE PERSISTENT VARIABLES(broadcast)

STOP QUIESCENT MODE(broadcast)

STOP QUIESCENT MODE(broadcast)